

# PADDLE CUTTING INSTRUCTIONS

THINGS YOU WILL NEED TO CUT YOUR NEW SUP ATX PADDLE  
MEASURING TAPE - HACKSAW  
5 MINUTE EPOXY - ACETONE  
RAGS



1 MEASURE FROM BLADE TIP UP TO YOUR DESIRED LENGTH DONT FORGET TO FACTOR IN THE LENGTH OF THE HANDLE.




2 USING YOUR HACKSAW AND A FLAT SURFACE, CUT THE PADDLE SHAFT AT DESIRED LENGTH.  
TIP: USE MASKING TAPE TO PROTECT THE SHAFT FROM ANY SLIPS.  
Remove tape after step 3.



3 APPLY MIXED EPOXY TO INSIDE OF SHAFT AND OUTSIDE OF HANDLE INSERT. PLACE HANDLE INTO SHAFT MAKING SURE GRIP PIVOT IS FACING THE FRONT OF THE PADDLE. THERE WILL BE OVERFLOW EPOXY SO KEEP A RAG NEAR BY TO WIPE UP EXCESS.


BEFORE EPOXY HARDENS, ALIGN THE HANDLE SO IT IS EVEN WITH THE BLADE. ONCE THE HANDLE IS ALIGNED, WIPE UP ANY EXCESS AND LET THE EPOXY CURE.

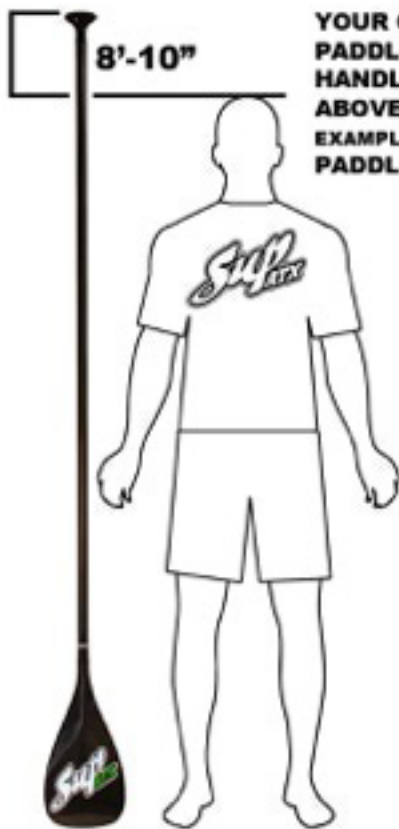

YOUR COMPLETED PADDLE LENGTH WITH HANDLE SHOULD BE 8" - 10" ABOVE YOUR HEIGHT.  
EXAMPLE: IF YOU ARE 6' YOUR PADDLE SHOULD BE 6'8" - 6'10"



## HOW TO HOLD YOUR PADDLE?

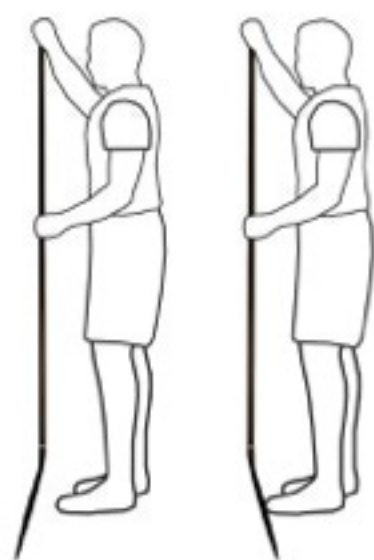

CORRECT!

WRONG!